USER GUIDE

VERO

3G Tablet

XOX™ MOBILE

VERO

XOX MOBILE

TABLE OF CONTENTS

1	**General Information**	**2**
1.1	Profile	2
1.2	Safety Notices	2
2	**Overview**	**4**
2.1	Appearance	4
2.2	Function of Keys	4
2.3	Open and close standby mode	4
2.4	Lock and unlock the screen	5
2.5	Using the touch screen	5
2.6	Homepage Information Column	5
2.7	Installing the SIM Card and Battery	6
2.8	Making Calls	6
2.9	Text Input	6
2.10	Reset tablet	7
2.11	USB Connect	7
2.12	Accessories	7
3	**Internet**	**8**
3.1	Browser	8
4	**Applications**	**10**
4.1	Explorer	10
4.2	Downloads	10
5	**System Settings**	**11**
5.1	Wireless and Network Settings	11
5.2	Display Settings	11
5.3	Application Settings	11
5.4	Date and Time Settings	12
5.5	Language and Input Settings	12
5.6	Storage	12
5.7	About the tablet	12
6	**Using the Menus**	**13**
6.1	Calculator	13
6.2	Calendar	13
6.3	Camera	14
6.4	Clock	14
6.5	Contacts	15
6.6	Downloads	15
6.7	Email	15
6.8	Gallery	17
6.9	Gmail	17
6.10	Google search	17
6.11	Local	17
6.12	Maps	17
6.13	Messenger	17
6.14	Music	17
6.15	News & Weather	18
6.16	Phone	18
6.17	Play store	18
6.18	Search	19
6.19	Sound Recorder	19
6.20	Talk	19
6.21	Voice search	19
6.22	YouTube	19
7	**Specifications**	**20**
8	**Appendix**	**21**

XOX™ MOBILE

1.0

GENERAL INFORMATION

Thank you for choosing an XOX tablet. Your State of Independence.

Please read this manual carefully so you can maximise your XOX tablet experience.

1.1 Profile

Our company may make changes to this tablet model without prior written notice and reserves the final right to interpret the specifications and performance of this tablet.

Due to different software and network operators, the information displayed on your tablet may be different. Refer to your tablet for details.

1.2 Safety Notices

Precautions

> Keep your tablet dry. Keep your tablet away from rain, moisture, liquid or other substances that could corrode electronic circuits.

> Do not expose your tablet to temperature extremes. Exposure to high temperatures will shorten the life of electronic circuits, damage the battery and some plastic parts. Cold temperatures may cause condensation and moisture build-up.

> Please take care of your tablet. Do not throw, knock or shock your tablet. This could cause damage to the internal circuits and high-precision components of your tablet.

> If the system shuts down automatically you will be able to reboot it shortly after is has shutdown.

> Keep your tablet out of the reach of children.

> Do not use or store your tablet in dusty places.

> Please charge the tablet regularly if you are not using it for a long period of time to avoid damage caused by the excessive consumption from the battery.

> Do not disassemble or use alcohol based products over the surface of the tablet.

> Storage and memory space may vary from the nominated system due to applications and programmes using space on opening.

> When the CPU is in high-speed operation, especially with 3D games or high-definition video this will cause the tablet to heat up considerably over a long period of time.

Safety warning

> **Road Safety comes first**

Never use your tablet when driving or walking in the street.

> **Switch off your tablet in-flight**

Wireless devices can cause interference with aircraft electronic equipment. Using a transmitting device in-flight is illegal and risky.

Please ensure your tablet is powered off and in flight mode when instructed if you wish to use the non-transmitting functions during the flight.

XOX™ MOBILE

GENERAL INFORMATION, CONTINUED

> **Qualified servicing of your tablet**

Only qualified personnel should repair your table. Any attempt to repair or tamper with your tablet will void your tablet warranty.

> **Accessories**

Use only approved accessories.

> **Emergency Calls**

Ensure your tablet is switched on, in a mobile network coverage area, and in service. Enter the emergency number for your country or territory, then press the **Dial Key**. Give your location and state your situation briefly. Do not end the call until told to do so.

Note: Some mobile networks do not support an emergency call service. Do not rely solely on your tablet for critical communications. Please consult your mobile network operator for further information on Emergency Call access and coverage.

XOX™ MOBILE

2.0

OVERVIEW

2.1 Appearance

2.2 Function of Keys

Your tablet has the following keys:

> **Power Key**

The Power key is located at the right hand side of your tablet.

Press and hold the Power Key for 2-3 seconds to open the screen.

You can press this button to power on/off the screen.

To shut down, hold down the power key and you will be asked if you would like to shut down. Press OK to shut down. When the tablet is off, press the power button to show the charging feature. Press the power key to re-open the tablet.

> **Volume Key**

The volume key is located on the top side of your tablet. You can adjust the ringer volume by pressing this key up or down to increase and reduce the volume.

2.3 Open and close standby mode

> **Open the Standby mode**

In start up mode, you can press the **power key** and the system will go into standby mode which will save power.

> **Close the Standby mode**

In standby mode, lightly tap the **power key** to enter the normal state

OVERVIEW, CONTINUED

2.4 Lock and unlock the screen

> **Lock**

You can set the screen timeout in the **settings>display** function. The tablet screen will timeout automatically and lock the screen to the standby mode if there is no activity and it reaches the preset standby time.

> **Unlock**

To unlock the screen, drag the lock sign displayed to unlock the screen and to enter the application screen.

2.5 Using the touch screen

Slide your finger left or right across the Home screen. These screens provide space for more widgets, shortcuts, and other items.

The main way to control Android features is by using your finger to manipulate icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

Touch

To select an icon or function simply touch your finger on the icon, letters and symbols on the onscreen keyboard, or press onscreen buttons to utilise the functions and applications on your tablet.

Touch and hold

Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customising the Home screen, you touch an empty area on the Home screen until the menu opens.

To Drag an Icon

Touch and hold the icon for a moment and then, without lifting your finger, move your finger on the screen until you reach the desired position on the screen.

Swipe or slide

To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list.

2.6 Homepage Information Column

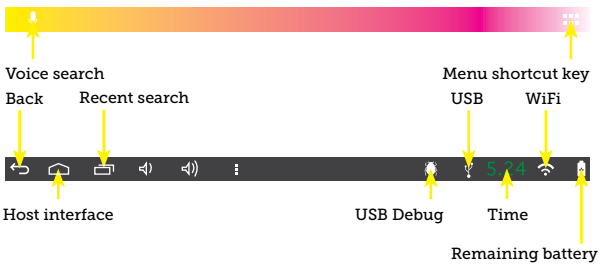

2.7 Installing the SIM Card and Battery

A SIM card carries information, including your tablets mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note: After powering off your tablet, wait for a few seconds before removing or inserting an SIM card. Take care when handling a SIM card, as friction or bending will damage the SIM card. Keep your tablet and SIM card out of children's reach.

Installation

> Hold the **power key** and select power off to turn your tablet off.

> Open the plastic covering on the right hand side of your tablet labeled SIM.

> Carefully insert the SIM Card into the SIM Card slot. The corner cutting of the SIM card should be aligned with the notch of the slot with the gold terminal plate of the SIM card facing downward as shown on the side. When correctly installed the SIM Card cannot be pushed in any further.

Note: Where supplied, keep the SD card out of the reach of children.

2.8 Making Calls

> **Making a call to a number in the contacts**

Go to the **phone icon** or your **phone application icon** on the Home screen, then select the Contacts tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the **dial icon** to begin a call.

> **Making a call to a number in call log**

Go to the **phone icon** or your **phone application icon** on the Home screen, then select the call log tab. Swipe or slide upward/downward to pick out and touch the target contact. Then you can begin a call.

> **Answering incoming calls**

Drag the **Answer icon** towards the right to answer an incoming call.

Touch the **End icon** to end the current conversation.

To reject an incoming call, drag the **End icon** towards left.

> **Managing multiple calls**

If you accept a new call when you are already on a call, you can drag the **Answer icon** towards right to answer the current call.

2.9 Text Input

When using the tablet, you can enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.

To switch between the numbers and letters on the keyboard, touch the "?123" or "ABC" button

OVERVIEW, CONTINUED

To switch between capital letters and lowercase letters, touch the arrow that forms above the **"?123" icon**.

Touch the keys on the keyboard to type.

The characters you have entered appear in the text field with suggestions for the word you are typing below. Use the **Delete icon** to erase characters to the left of the cursor. After you have finishing typing, touch **Back icon** to close the keyboard.

2.10 Reset tablet

Press the reset button on the reverse side of the device to restart and reset your tablet

2.11 USB Connect

You can connect your tablet to a computer with a USB cable to transfer music, pictures, and other files between your tablets SD card and the computer. Turn off USB storage to disconnect your tablet from your computer.

2.12 Accessories

Power Adapter	1
USB Cable	1
User Manual	1

3.0

INTERNET

3.1 Browser

You can use the Browser to view web pages and search for information on the internet. When you open the browser, your home page opens. You will require network support before using a web browser. If there are network related problems, please contact your network provider.

Touch the Browser sign (world globe) in the application list to enter the browser pages. The default home page is the recently viewed, showing your recently viewed pages.

To go to a webpage or search the web

Go to the URL box at the top of the Browser screen. Enter the address (URL) of a webpage, or enter the terms you want to search for by touching **search icon** (magnifying glass). As you enter text, your web search engine makes suggestions of web pages and queries.

The Chrome application will have similar functionalities.

Working with bookmarks

To bookmark a website that you are looking at touch the **star icon** on the right to add it into a list of bookmarks. To open a bookmarked website, touch the **star icon** on the right where you can view thumbnails of your bookmarks.

To refresh the current page

Touch the **circle arrow icon** to refresh and update the current web page.

To zoom in or out on a webpage

Slide your finger slightly on the screen to reveal the Zoom control. Touch the plus or minus side of the Zoom control to zoom in or out.

To find text on a webpage

Touch Menu icon and touch **More > Find** on page. Enter the text you're looking for. As you type, the first word with matching characters is highlighted on the screen and subsequent matches are boxed. Touch the left or right arrow to scroll to, and highlight the previous or next matching word.

To Copy text from a webpage

Open a webpage and scroll to the beginning of the text you want to copy, touch the **Menu icon** and select **More > Select text**. Use your finger to drag across the text you want to copy. Touch the text you selected and the text will be copied to the clipboard.

To navigate among webpages

You can open links on a webpage, navigate back and forward, and review your browsing history, just as in any web browser.

> To open a link: Touch a link to open it. Links that you touch are highlighted in orange until the webpage they refer to opens in the window.

> To go back and forward among the pages you've opened: Press back key or touch **menu icon> forward**.

> To view your Browser history: As you browse the web, Browser keeps track of the pages you visit, to help you find your way back later. Select the icon at the right of the URL box, and select the History tab to view your browser history. Select Most visited tab and you can view a list of the most visited webpages.

INTERNET, CONTINUED

Working with multiple browser windows

You can open up several Browser windows at once and switch among them.

> To open a new Browser window, Select the **menu icon >Windows>new window**; New windows open with your home page.

> To switch Browser windows, Select the **menu icon > windows**. All of your open windows are listed here. You can select one of them as you need.

> To close a Browser window, Select **menu icon > windows**. All of your open windows are listed here. You can touch the **close icon** at the right side of each open window to close it.

Downloading files

You can download files and applications from a webpage. The files that you download are stored on your SD card.

To download a file – Different webpages offer different mechanisms for downloading pictures, documents, applications, and other files. Select, touch, and hold an image or a link to a file or to another webpage. In the menu that opens, select Save. If the file is in a format supported by an application on your tablet, it is downloaded to your SD card. Select the **menu icon**, select **More>downloads**, to find a list of downloaded files. If you want to delete a file, touch the indication box at the left of the downloaded file, and an option box will pop out, you can select delete to delete an unnecessary file.

XOX™ MOBILE

4.0

APPLICATIONS

4.1 Explorer

Touch Explorer (white box) in the application list. This supports the files that are held in the internal memory, USB and SD Card.

To copy, cut, and delete, touch Editor in the files list. Select the file you want to chose, then touch the function you wish to use.

4.2 Downloads

Click on the **downloads icon** here in the application list where you can preview the downloading or completed document contents.

Click download file to stop or delete the download content

5.0

SYSTEM SETTINGS

The Settings application contains most of the tools for customising and configuring your tablet.

5.1 Wireless and Network Settings

You can use Wireless & Network settings to configure and manage connections to networks and devices by using Wi-Fi, Bluetooth and mobile networks. You also can use Wireless & Network settings to configure connections between your tablet and virtual private networks (VPNs), to connect your computer to the Internet using your tablet, and to turn off all wireless and network transmitting functions with Airplane mode.

Connecting to Wi-Fi networks

To activate the WiFi capability on your tablet:

> Go to **Settings>Wireless & networks**. Select Wi-Fi to turn it on. Your tablet scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a **Lock Icon**.

Note: If your tablet finds a network that you have previously connected to, it will automatically connect to it. Go to a network to connect to it. If the network is open, you are prompted to confirm that you want to connect to that network by touching Connect. If the network is secured, you are prompted to enter a password or other credentials.

Connecting to Bluetooth devices

To activate the Bluetooth capability on you tablet:

> Go to **Settings>Wireless & networks > Bluetooth**. Select Bluetooth to turn it on.

You must pair your tablet with a Bluetooth device before you can connect to it. Once you pair your tablet with the Bluetooth device, they stay paired unless you unpair them. Your tablet scans for and displays the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, make it discoverable.

Connecting to a computer via USB

You can connect your tablet to a computer with a USB cable to transfer music, pictures, and other files between your tablets SD card and the computer.

5.2 Display Settings

You can use the Display settings to configure the brightness, wallpaper type, font size, and screen timeout of your tablet.

5.3 Application Settings

You can use the Applications settings to view details about the applications installed on your tablet, to manage their data and force the application to stop, to view and control currently running services, and to view the storage used by applications, etc.

SYSTEM SETTINGS, CONTINUED

Application Management
In this setting it is easy to manage and delete applications that have been installed.

Swipe across to get to all applications, touch the **top right hand icon** to sort by size or name. Click on the application of your choice to see its relevant information.

Running services
In this setting you can end and set up programmes that are running.

Access Management
In this setting you can access and manage content permissions in applications.

5.4 Date and Time Settings

You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the mobile network, etc.

5.5 Language and Input Settings

In this setting you can choose the language you want.

The input methods can be set by users. You can add words into the dictionary or delete them.

The Android keyboard can be set to have automatic capital function of opening or closing.

5.6 Storage

Use the Storage settings to monitor the used and available space on your tablet and your SD card, and to manage your SD card.

5.7 About the tablet

This function enables you to view some tablet related information.

6.0

USING THE MENUS

6.1 Calculator

Enter numbers and arithmetic operators on the basic screen. Drag the basic screen to the left to open the advanced screen, select Clear to delete the last number or operator you entered. Select and hold Clear to delete everything on the display. On the calculator screen, you can touch **menu icon** to clear history or access advanced panel.

6.2 Calendar

You can open Calendar to view events you've created.

Select the **Calendar icon** in the main menu interface. Events from each account you have added and configured to synchronise to your tablet are displayed in Calendar.

Creating an event
You can use Calendar on your tablet to create events. In any calendar view, select the **menu icon** and then touch **more> new even**t to open an event details screen for a new event.

Or you can also select and hold a spot in Day, Week, or Month view. Select New event to open the Event details screen with that day and time already entered.

Enter the name, time, and additional details about the event. You can select the **Plus icon** to add more reminders. In the Guests field, you can enter the email address of people you want to invite to the event. Separate multiple addresses with commas (,). If the people to whom you send invitations use Google Calendar, they will receive an invitation in Calendar and by email. Select the **menu icon** and select Show extra options to add details about the event. When you have completed all the details for the event scroll to the bottom of the Event details screen and select Done. The event will be added to your calendar.

Change calendar view
In the Calendar screen, select the **menu icon >Agenda**, Day, Week, or Month. Each view displays the events in your calendar for the period of time that you specify. To view more information about an event in Agenda view, select the event. To view the events of a day in Month view, touch a day.

Synchronising and displaying calendars
When you add a Google Account or Microsoft Exchange ActiveSync account to your tablet that includes a calendar service, and you configure that account to synchronise calendar events to your tablet, the events from that calendar are added and kept up to date in Calendar on your tablet.

In the calendar screen, select **menu icon** and select **More > Calendars**, where you can set whether calendars are stored on your tablet. The Calendar screen displays all the calendars you've added or subscribed to for each account synchronised to your tablet, organised by account. Select the name of an account to show or hide its calendars on your tablet. An icon to the right of each calendar indicates whether its events are synchronised in your tablet and whether they are visible in Calendar.

USING THE MENUS, CONTINUED

Change Calendar settings

You can change the settings for how your Calendar displays an event, and how your Calendar notifies you of upcoming events. Open a Calendar view, select **menu icon** and select **more>settings**.

> Hide declined events: Select if you don't want to see events that you have declined.

> Use home time zone: You can turn on/off this function as required.

> Home time zone: After turning on Use home time zone, you can set home time zone through this function.

> Set alerts & notifications: You can configure event reminders to open an alert, send you a notification, or turn off event notifications on your tablet.

> Select ringtone: You can select the ringtone to sound when you receive an event reminder.

> Vibrate: You can select the vibration mode when you receive an event reminder.

> Default reminder time: You can select the default time before an event for event reminders.

> Build version: The version of Calendar you are using.

6.3 Camera

The Camera is a combination camera and video recorder that you use to shoot and share pictures and videos.

Select the **Camera icon** in the main menu, or on the home screen. The camera opens in Landscape mode, ready to take a picture. In this mode, press the **round icon** at the bottom of the screen to take a picture. To switch between the camera and video recorder press the icon on the left side of the **round icon** to select the function you require.

You can use the **setting icon** to fine tune camera related parameters to achieve better results.

6.4 Clock

Select the **Clock icon** on the Home screen or in the main menu interface.

Alarms

You can set an alarm by modifying an existing alarm or by adding a new alarm. Note: Alarms that are set are underlined in green.

Gallery

You can view pictures through this function.

USING THE MENUS, CONTINUED

6.5 Contacts

In the People screen, select the **menu icon** and you can perform the following operations:

> Search: Start entering the name of the contact you're searching for. As you type, contacts with matching names appear below the search box. You can then select a matching contact in the list to perform further operations.

> New contact: Select this function to add a new contact to contacts list.

> Display options: You can select the display options and choose contacts to display.

> Contacts groups: You can assign contacts to several caller groups.

> Contacts Delete: Select this function and highlight the contacts which you want to delete. To delete all contacts, you just need to select all at the top of contacts screen. Select OK and confirm to Delete contacts.

> More: Through this function, you can perform following operations: accounts and import/export.

> Favorites: You can add contacts you communicate with most frequently to favorites.

Note: Factory data reset enables you to erase all of your personal data from internal tablet storage, including all messages and contacts information stored in tablet memory.

6.6 Downloads

Through this function, you can view a list of files and applications which you downloaded from the web page.

6.7 Email

You use the Email application to read and send email.

Opening Email and the Accounts screen

> **To open Email**

Select the **Email icon** on the Home screen or in the main menu interface. The first time you open Email, a setup wizard opens to help you add an email account. After the initial setup, Email opens to the last screen you were viewing or, if you have not used Email recently, it displays the contents of your Inbox (if you have only one account) or the Accounts screen (if you have multiple accounts).

> **To open the Accounts screen**

The Accounts screen lists your Combined Inbox and each of your email accounts. If you have starred (highlighted), drafted, or unsent messages in any of your accounts, the folders for those items from all accounts are also displayed. From a folder screen, select the **menu icon >Accounts**. Each folder and account on the Accounts screen displays the number of unread messages in green, or the total number of messages in gray. You can select a combination folder, such as the Combined Inbox folder, to view the messages it contains.

USING THE MENUS, CONTINUED

> **To open combined inbox**

If you have configured Email to send and receive email from more than one account, you can view all messages sent to all accounts in your Combined Inbox. Open the Accounts screen, and then select the Combined Inbox.

> **Reading your messages**

You can read messages in your Combined Inbox, or in the Inbox, or folder for an individual account. When you receive a new message, you will receive a notification in the Status bar, unless you've turned off Email notifications using the Email Account settings. You can also set whether Email notifications vibrate your tablet, or pick a ringtone from Email Account settings.

> **Open the Combined Inbox, an account's Inbox, or another folder of messages**

Select the message to read. The message opens in a screen with information about who sent it, the date it was sent, and related information at the top, followed by the contents of the message. You can reply to, or forward a message that you receive. You can also delete messages and manage them in other ways.

> **Starring emails**

You can star an important message to highlight it, and make it easy to keep track of. Once you star an email, a Starred folder is added to the Accounts screen. While reading an email, select the star in its header if you wish to highlight the email. Or you can select a message's star while viewing a list of messages in a folder. You can select an email's star again to un-star an email.

> **Composing and sending email**

You can send email to your contacts or to other people or groups.

Select **menu icon >Compose**. As you enter text, matching addresses are offered from your Contacts. You can select the suggested address or enter a new addresses. Separate multiple addresses with commas. Press menu and select the Add Cc/Bcc to address a copy or blind copy of the message select Add Attachment to add an attachment to the email. Enter a subject for the message. Enter the text of the message. After finishing, select the Send to send the email.

> **Adding a signature to your messages**

You can add one or a few lines of text to every message you send from an account, such as your name, contact information, etc. Open the Accounts screen. Select and hold the account whose settings you want to change. In the menu that opens, select **Account settings>signatur**e. Or you can open the settings for an account while you're viewing its inbox, by selecting the **menu icon** and selecting **Account settings>signature**. Enter a signature and confirm.

> **Adding email accounts**

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

XOX MOBILE

USING THE MENUS, CONTINUED

To add an email account: Open the Accounts screen. Select the **menu icon**, and select Add account. In the Setup Email screen, enter your email address and password. Select Next. If you need to enter email account settings the wizard can't configure for you, select Manual setup, you are prompted to enter your email account details. Enter any other information requested by the type of account you are adding and select Done. Enter a name for the account and select Done. Your email will start downloading your email messages and you can start using it to send and receive messages using the new account.

> **To delete an email account**

Open the Accounts screen. Select and hold the account to delete. Select Remove account in the menu that opens. Select OK in the dialogue to confirm that you want to delete the account.

6.8 Gallery

Both pictures and videos taken by camera or stored in SD card can be viewed through this function.

6.9 Gmail

You can use Gmail to send and receive email.

6.10 Google search

You can use Google search through this function.

6.11 Local

You can fix your location through this function.

6.12 Maps

You can enter Google Maps through this function.

6.13 Messenger

An instant messaging service that provides both t0065t and voice communications by logging in through your google/gmail account or through message exchange.

6.14 Music

Music plays audio files that are stored on your tablet's SD card, so before you open Music, you must copy audio files from your computer onto the SD card. Music supports a wide variety of audio file formats, so it can play music that you purchase from online stores, music that you copy from your CD collection, and so on.

USING THE MENUS, CONTINUED

To open Music and view your music library

Select the **Music icon** in the main menu interface, or on the Home screen.

When you copy music to your SD card, Music searches the card for music files and builds a catalogue of your music, based on information about each file that is stored in the file itself. This can take from a few seconds to several minutes, depending on how many files you have copied onto the SD card. When the catalogue is complete, the Music library screen opens, with tabs that you can touch to view your music library organised by Artists, Albums, Songs, or Playlists.

Note: If your tablet powers off due to a low battery while you are downloading music via USB cable, your tablet will prompt ' SD card error' when you power on your tablet. Repower on your tablet about 5 times, the same prompt would occur. Under this circumstance, you should repower on your tablet until it prompts 'SD card error. Format?'. Please select format to format your SD card to ensure your tablet runs properly.

Any sudden interruption during downloading music via USB cable may result in damage to your SD card.

Play music

You can listen to music by using your tablet's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset or speaker.

Select a song in your library to listen to it. The Playback screen opens and the song you selected starts to play. The Playback screen contains several icons that you can select to control the playback of songs. On the right-top of playback screen, you will find three function icons. You can select them to open the current playlist, shuffle the current playlist or repeat the current playlist/repeat the current track (touch twice). Three function icons just above the process bar can be used to control the playing process of the music application. Their functions can be defined as the following: switch to last song (select) /rewind (select and hold), play/pause and switch to next song (select)/ fast forward (select and hold)

To delete a song from the SD card

You can delete music from the storage card. Select and hold a song in a library list. In the menu that opens, select Delete.

6.15 News & Weather

You can view the latest news and weather through this function.

6.16 Phone

Select the **Contacts icon** on the Home screen, or in main menu interface. Four tabs are listed at the top of the screen. Select your tablet tab and you can find a dial pad screen where you can input a phone number to start a call.

Note: During a conversation, you can't start a new call by opening the dial pad, entering a number and pressing the **dial key**. If you press **dial key**, the current conversation will hold.

6.17 Play store

You can download and manage media files through this application.

USING THE MENUS, CONTINUED

6.18 Search

The Search function enables you to open a search box for searching your tablet and the web.

6.19 Sound Recorder

Use this function to record audio files. Three function icons at the bottom of the Recorder screen are corresponding to start recording, review record file and stop recording.

6.20 Talk

You should add a Google account first.

6.21 Voice search

You can search by voice through this function.

6.22 YouTube

You can log on YouTube through this application.

7.0

SPECIFICATIONS

DIMENSION (MM*MM*MM)	200x134.7x7.9
WEIGHT	Approx 364g
LCD	7.85" 1024x768 IPS, Capacitive multi touch
OS	Android 4.2
PROCESSOR	MTK MT8389 (Quat Cortex-A7 1.2GHz)
MEMORY	1GB DDR3, 4GB eMMC Internal (8GB optional), Micro SD (up to 32 GB)
WI-FI/BLUETOOTH	802.11b/g/n
CONNECTIONS	Mico-USB (Charging and OTG), Micro-SD slot, Phone Jack
BATTERY	4000mAh
GPS	Yes
3G	WCDMA 900/2100, GSM, EDGE, HSPA+ (DL 42M/ UL11M)
SERVICE TIME	Up to 15 hours music mode, 3 hours internet, 4 hours video
OPERATING TEMPERATURE	Between -10deg and 45deg
SENSOR	3-axis G-sensor, Proximity, e-Compass
SPEAKER	2 x 0.5W
CAMERA	Front 2.0MP (0.3MP Optional), Rear 5.0MP AF (2.0MP optional)

XOX™
MOBILE

8.0

APPENDIX

Appendix 1 – Troubleshooting

If you find exceptions when operating your tablet, restore the factory settings and then refer to the following table to solve the problem.
If the problem persists, contact the distributor or service provider.

FAULT	CAUSE	SOLUTION
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal contacts of the SIM card are dirty.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted due to being nearby a high building or you are located in a basement.	Move to a place where signals can be effectively transmitted
	Line congestion occurs when you use your tablet in high-traffic hours	Avoid using your tablet in high-traffic hours
Your tablet cannot be powered on	The battery requires charging.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
Your tablet cannot connect the network	The SIM card is invalid	Contact your network service provider
	Your tablet is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An incorrect charger is used	Use the charger specially designed for your tablet
	Poor contact	Ensure the charger plug is in good contact with your tablet

XOX™ MOBILE